

 
OPERATION INSTRUCTION
Video Intercom System

Outdoor Camera
User Manual

OPERATION INSTRUCTION
Video Intercom System

Outdoor Camera
User Manual

Dimension parameter

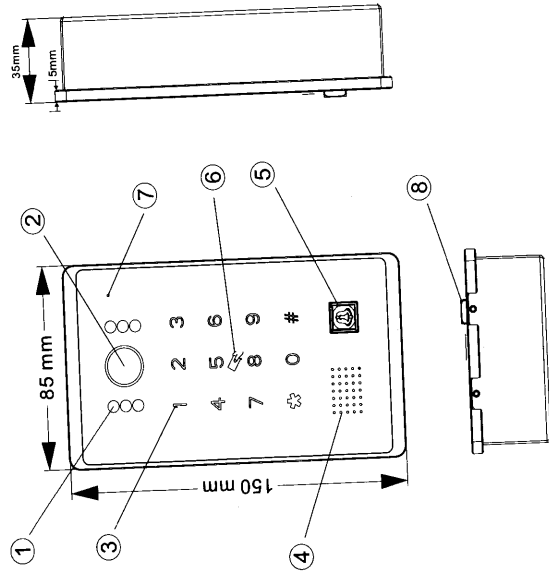

1	IR LED
2	Camera
3	Sensor keypad
4	Speaker
5	Call button
6	Card reader area
7	Microphone
8	Screw slot

- B. Press 3 (button light flash fast) + 01 + # (Di..Di... button light flash slow) --- The card or password unlock.
- C. Press 3 (button light flash fast) + 02 + # (Di..Di... button light flash slow) --- The card and password unlock.

(4) Modify the unlock time of relay

Press 4 (button light flash fast) + 00 - 99 + # (Di..Di... button light flash slow) The 00-99 means unlock time. Take a example if set as 02, the unlock time is 2s, and so on. But if set as 00, then the first swipe card is on, swipe the card again is off.

(5) Safety mode setup

Press 5 (button light flash fast) + 00 + # (Di..Di... button light flash fast) --- Off mode.
 Press 5 (button light flash fast) + 01 + # (Di..Di... button light flash slow) --- Locked mode. (Means within 5 minutes, continue use wrong card or incorrect password for 10 times, the device will be locked out for 2 minutes, button light fast flashing, indoor monitor start monitoring automatically. Then card and password won't work in this 2 minutes.)
 Press 5 (button light flash fast) + 02 + # (Di..Di... button light flash slow) --- Alarm mode (Means within 5 minutes, continue to use wrong card or incorrect password for 10 times, the built in buzzer will alarm for 1 minute, button light fast flashing, indoor monitor start monitoring automatically).

Note: In the process of setup, press * can exit or back to last step.

User Operations

User modify password by card:

Press *, read card + old password (default 0000, slow flashing)+ # +N1N1N1 (4 digits as new password) + # +N1N1N1 (input password again), if no mistake on operation, then the buzzer will ring as Di....., button light stop flashing. means password modified successfully.

Card access to unlock

The valid card which added in the detecting area, unlock the door.


Password to unlock

Input password on the keypad + #, if password correct then door will be unlocked.





Card and password to unlock

Swipe the valid card and input related password + #, both correct can unlock the door.

Connection Instruction

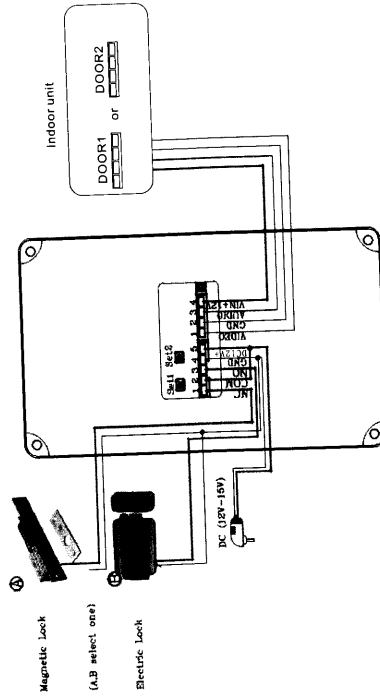


Accessories

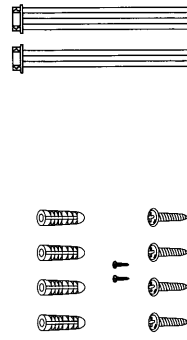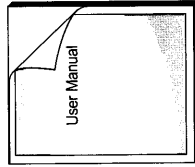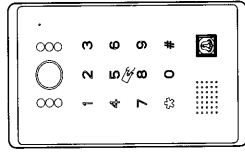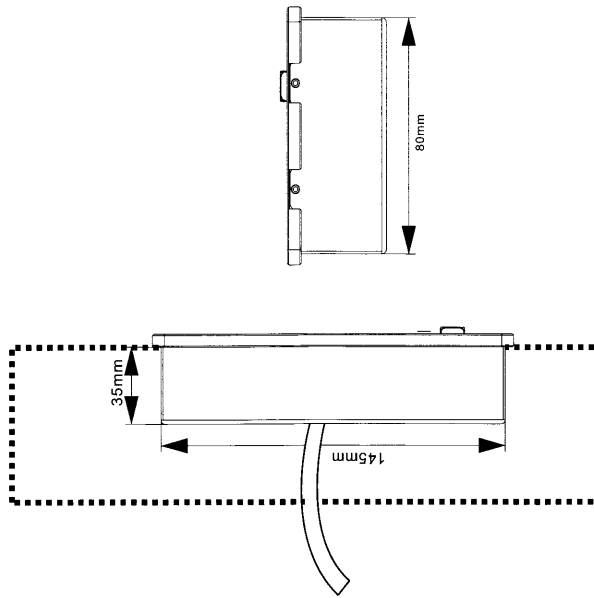

- Access unit ----- 1PCS
- Plastic Anchors ----- 4PCS
- Screws ----- 6PCS
- User manual ----- 1PCS
- External power supply switch(Optional) ----- 1PCS
- 4 Pin line ----- 1PCS
- 5 Pin line ----- 1PCS

INSTALLATION PROCESS OF OUTDOOR UNITS

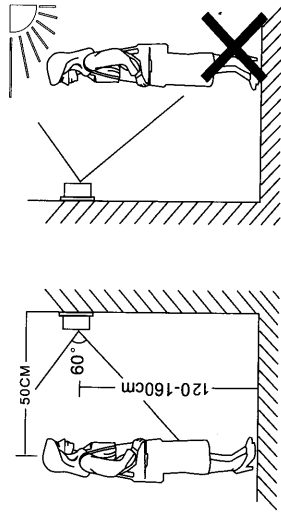

⚠ NOTE:

- Avoid installation of the device near strong radiation e.g. AC motor and lift.
- Maintenance should be complied with qualified technician.
- Avoid hard shake, beating and collision, otherwise the internal exact components may be damaged.
- Do not expose the outdoor camera under strong light or sunshine.
- Do not install the outdoor camera in the environment e.g. direct sunlight, contact rain, High temperature, high humidity, full of dust and chemistry corrosive.
- Select the most suitable position where the camera is located at user's eye level
- Switch off power supply before installation.
- Keep more than 30cm away from AC power supply to avoid external interference.
- Keep it away from the water and magnetic field.