

## NOTE ON WIRING CONNECTION

- i** The electric lock/source/camera is not included in the package, you can purchase an electric lock which is suitable for actual requirement.
- i** In the standard delivery the system supports locks with Normally Open (N.O.) door unlocking method. It means that in the normal state the dry contact is opened so the lock is kept under constant closed state. If the unlocking push-button is pressed and the dry contact is changed to closed, then the lock is released.
- i** Please note that the 2P Short Pin is designed for programming the indoor monitor, the indoor monitor will be programmed to main monitor if you plug the 2P Short Pin in; however the indoor monitor will be programmed to extension monitor if the 2P Short Pin is pulled out. Setup ok, after power machine automatically detects, if it is in state machine work Set, need makes the machine to detect electric.

 



Indoor machine power with a built-in power or an external power optional. Please refer to actual control using. If the indoor machine with a built-in power source, applicable to wide voltage range(AC100V-240V). Please first pull out the AC power plug before installation of device(shown as below).




- i** Use and selection of wire, please refer to the following.(The actual effect and the quality of wire rod has the very big relations)

1. 4C ordinary unshielded and shielded wire connection mode:

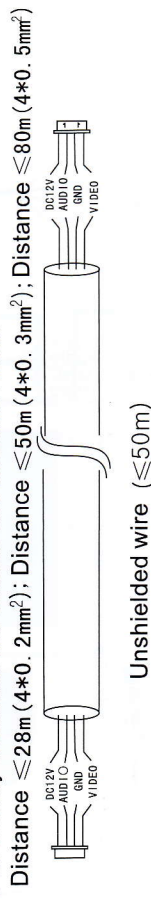


2. 3C ordinary unshielded +video wire (75-3) connection mode:

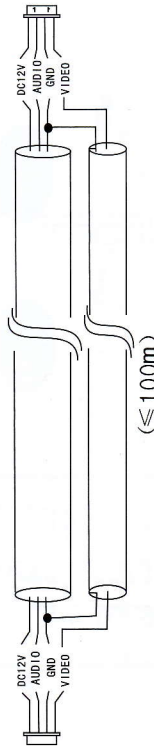

3. CAT5 or CAT6 network cable connection mode: (Not recommended)



Unshielded network cable ( $\leq 20\text{m}$ )

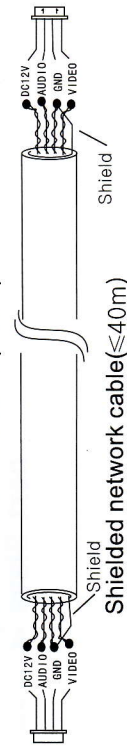

Shielded network cable ( $\leq 40\text{m}$ )

## OPERATION INTRODUCTION

### ◆ VISITOR CALL

#### Standby mode

The Visitor press the call button on outdoor camera 1

The Visitor press the call button on outdoor camera 2

- ▶ A 10s of continuous Ding Dong tone is heard inside and outside

**i NOTICE:**

The visitor's image automatically displayed on the screen

If both call button on two outdoor camera are pressed at approximate to the same time, the preference will be given to the outdoor camera which call button was pressed first, unless the call button is pressed again after the indoor monitor go into standby mode, please be aware of that there is no indication on second outdoor camera.

Press the talking button on indoor monitor

- ▶ Stop ringing

**i NOTICE:**

Start conversation with outdoor camera

The indoor unit will automatically go into standby mode if you are not at home or have not reached the indoor unit in 60s.

- ▶ The conversation duration is 120s at a time

Press the unlock button on indoor monitor

Press the hang up button on indoor monitor

End

- i** Both the visitor's voice and image will be not switched off within 20s of time span when the unlock button is pressed, this individualized function allow you to make sure whether the visitor already come in.

- i** For the models with SD card, when the doorbell record for the video mode: From the start of a call, the whole process will be recording. If the user press the button "⏏", the recording will be stopped manually.

- i** For the models with SD card, when the doorbell record for the snapshot mode: The whole process will be capture, user can press the button "📷" to capture an image.

- i** In the monitoring state: the machine can listen to the sound of the outdoor machine, you can press the button "🔊" to conversation and press the button "🔒" to unlock.